



*Make life full of hope*

# USER GUIDE

## Solar inverter

IVEM Series(3KVA~5KVA)

*Solar inverter*



# Contents

<b>ABOUT THIS MANUAL</b> .....	<b>1</b>
Purpose.....	1
Scope .....	1
Safety instructions .....	1
<b>WARNING MARKS</b> .....	<b>2</b>
<b>INTRODUCTION</b> .....	<b>3</b>
Features .....	3
Basic system architecture .....	3
<b>PRODUCT OVERVIEW</b> .....	<b>4</b>
<b>SPECIFICATIONS</b> .....	<b>5</b>
<b>INSTALLATION</b> .....	<b>8</b>
Safety guidance .....	8
Unpacking and inspection .....	9
Preparation .....	9
Mounting the unit.....	9
Battery connection .....	10
AC input /output connection .....	11
PV connection .....	13
Final assembly .....	14
Dry contact signal .....	15
<b>OPERATION</b> .....	<b>15</b>
Power ON/OFF.....	15
Operation and display panel .....	16
LCD display icons .....	17
LCD Setting .....	18
Display information .....	22
<b>WARNING CODE TABLE</b> .....	<b>24</b>
<b>FAULT CODE TABLE</b> .....	<b>25</b>

## ABOUT THIS MANUAL

### Purpose

This manual describes the assembly, installation, operation, warning code and fault code of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

### Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

### Safety instructions











**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuse is provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

### WARNING MARKS

Warning marks inform users of conditions which can cause serious physical injury or death, or damage to the device. They also tell users how to prevent the dangers. The warning marks used in this operation manual are shown below:

Mark	Name	Instruction	Abbreviation
 Danger	Danger	Serious physical injury or even death may occur if not follow relevant requirements.	
 Warning	Warning	Physical injury or damage to the device may occur if not follow relevant requirements.	
 Forbid	Electrostatic sensitive	Damage may occur if relevant requirements are not followed.	
 Hot	High temperature	Do not touch the base of the inverter as it will become hot.	
Note	Note	The procedures taken for ensuring proper operation.	Note

### INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

### Features

- Pure sine wave inverter
- Built-in MPPT solar charge controller
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload / Over temperature/ short circuit protection
- Inverter running without battery
- Lithium battery activation function.
- Cold start function


### Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- Generator or Utility.
- PV modules (option)

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

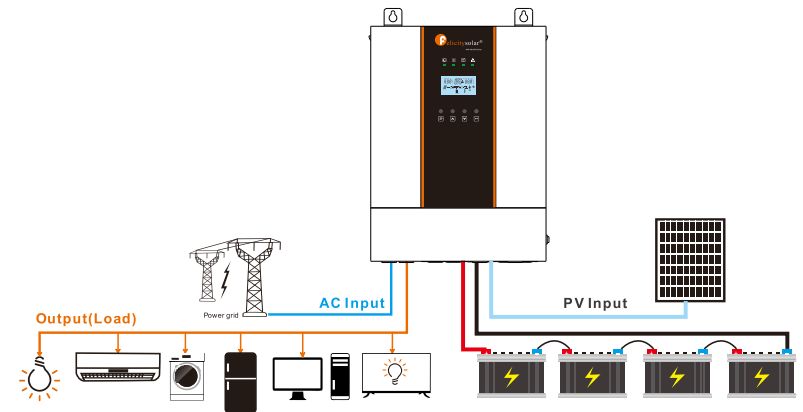

**PRODUCT OVERVIEW**

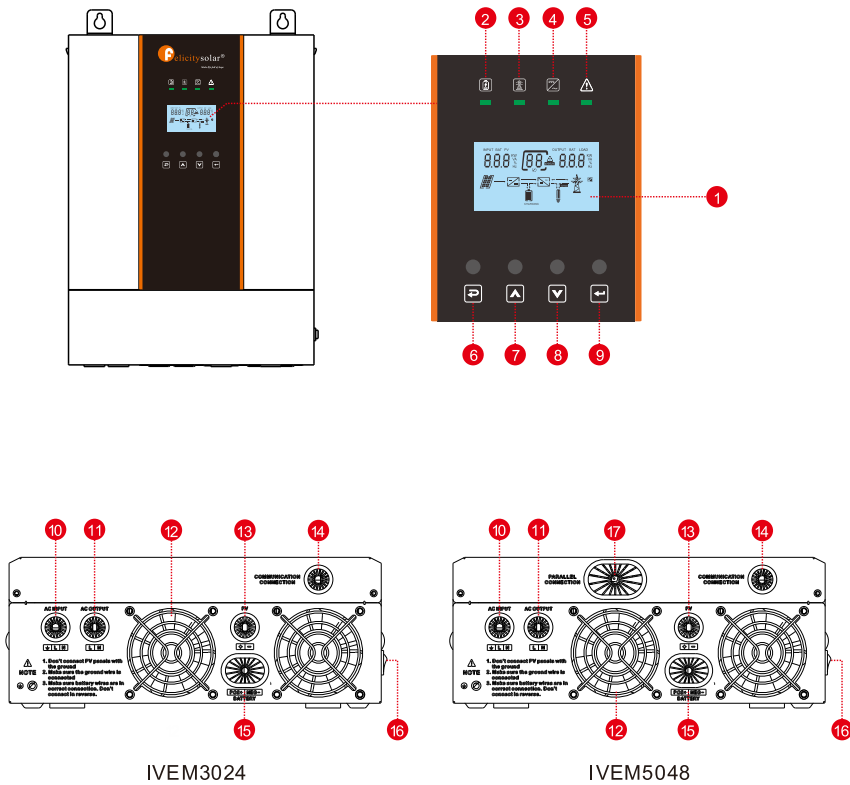

- 1. LCD display
- 2. Charging indicator
- 3. Utility bypass indicator
- 4. Inverter indicator
- 5. Fault or warning indicator
- 6. ESC button
- 7. UP button
- 8. DOWN button
- 9. ENTER button
- 10. AC input port
- 11. AC output port
- 12. Fan
- 13. PV input connection port
- 14. Communication connection port
- 15. Battery connection port
- 16. Switch
- 17. Parallel connection

**SPECIFICATIONS**

Line Mode Specifications		
Model	IVEM3024	IVEM5048
Rated Output Power	3000VA	5000VA
	3000W	5000W
Nominal DC Input Voltage	24V	48V
Input Voltage Waveform	Sinusoidal (utility or generator)	
Nominal Input Voltage	230Vac	
Low Line Voltage Disconnect	170Vac±7V (UPS); 90Vac±7V (Appliances)	
Low Loss Voltage Re-connect	180Vac±7V (UPS); 100Vac±7V (Appliances)	
High Line Voltage Disconnect	280Vac±7V	
High Line Voltage Re-connect	270Vac±7V	
Max AC Input Voltage	280Vac	
Nominal Input Frequency	50Hz / 60Hz (Auto detection)	
Low Line Frequency Disconnect	40±1Hz	
Low Line Frequency Re-connect	42±1Hz	
High Line Frequency Disconnect	65±1Hz	
High Line Frequency Re-connect	63±1Hz	
Output Voltage Waveform	As same as input waveform	
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits	
Efficiency (Line Mode)	>95% (Rated R load, battery full charged)	
Transfer Time (Single unit)	10ms typical (UPS); 20ms typical (Appliances)	
Transfer Time (Parallel)	50ms typical	
Pass Through Without Battery	Yes	
Max. Bypass Overload Current	30A	40A
Max. Inverter/Rectifier Current	15A/3000W	30A/5000W

Utility Charge Mode Specifications		
Nominal Input Voltage	230Vac	
Input Voltage Range	90-280Vac	
Nominal Output Voltage	Dependent on battery type	
Max. Charge Current	100A	
Charge Current Regulation	10-100A (Adjustable unit is 1A)	
Over Charge Protection	Yes	
Solar Charging & Grid Charging		
Max. PV Open Circuit Voltage	450V	
PV Voltage Working Range	120V – 450V	
Max. Input Power	4000W	6000W
Max. Solar Charging Current	100A	
Max. Charging Current(PV+Grid)	100A	
Max. Input Current	15A	20A
Min. Startup Voltage	125V	








Charge Algorithm														
Algorithm	<b>Three stage:</b> Boost CC (Constant current stage) -> Boost CV (Constant voltage stage) -> Float (Constant voltage stage)													
Charging Curve														
Battery Type Setting	<table border="1"> <thead> <tr> <th>Battery Type</th> <th>Boost CC/CV</th> <th>Float</th> </tr> </thead> <tbody> <tr> <td>AGM</td> <td>28.2V/56.4V</td> <td>54V</td> </tr> <tr> <td>Flooded</td> <td>29.2V/58.4V</td> <td>54V</td> </tr> <tr> <td>Self - defined</td> <td colspan="2" rowspan="2">Adjustable, up to 30V/60V</td> </tr> <tr> <td>Lithium</td> </tr> </tbody> </table>	Battery Type	Boost CC/CV	Float	AGM	28.2V/56.4V	54V	Flooded	29.2V/58.4V	54V	Self - defined	Adjustable, up to 30V/60V		Lithium
Battery Type	Boost CC/CV	Float												
AGM	28.2V/56.4V	54V												
Flooded	29.2V/58.4V	54V												
Self - defined	Adjustable, up to 30V/60V													
Lithium														

Inverter Mode Specifications		
Model	IVEM3024	IVEM5048
Rated Output Power	3000VA	5000VA
	3000W	5000W
Nominal DC Input Voltage	24V	48V
Output Voltage Waveform	Pure sine wave	
Nominal Output Voltage	230Vac±5%	
Nominal Output Frequency (Hz)	50±0.3Hz/60Hz±0.3Hz (Adjustable)	
Peak Efficiency	90%	
Over-Load Protection (SMPS load)	5s@ ≥150% load; 10s@105%~150% load	
Surge Rating	2* rated power for 100ms	
Capable of Starting Electric	Yes	
Output Short Circuit Protection	Yes	
Cold Start Voltage	23V	46V
Low Battery Alarm		
Load < 50%	22.5V	45.0V
@Load ≥ 50%	22.0V	44.0V
Low Battery Alarm Recovery		
Load < 50%	23.5V	47.0V
@Load ≥ 50%	23.0V	46.0V
Low DC Input Shut-down		
Load < 50%	21.5V	43.0V
@Load ≥ 50%	21.0V	42.0V
High DC Input Alarm & Fault	31V±0.4V	62V±0.4V
High DC Input Recovery	30V±0.4V	60V±0.4V
General Specifications		
Operating Temperature	0C°~55C°	
Range Storage Temperature	-15C°~60C°	
Net Weight (Kg)	10.8KG	13.2KG
Product Size (D*W*H)	395*295*129mm	415*320*129mm
Package Dimension (D*W*H)	492*392*222mm	514*419*222mm

## INSTALLATION

### Safety Guidance

Warning marks inform users of conditions which can cause serious physical injury or death, or damage to the device. They also tell users how to prevent the dangers. The warning marks used in this operation manual are shown below:

	<ul style="list-style-type: none"> <li>After receiving this product, first confirm the product package is intact. If any question, contact the logistic company or local distributor immediately.</li> <li>The installation and operation of inverter must be carried out by professional technicians who have received professional trainings and thoroughly familiar with all the contents in this manual and the safety requirements of the electrical system.</li> <li>Do not carry out connection/disconnection, unpacking inspection and unit replacement operations on the inverter when power source is applied. Before wiring and inspection, users must confirm the breakers on DC and AC side of inverter are disconnected and wait for at least 5 minutes.</li> </ul>
	<ul style="list-style-type: none"> <li>Ensure there is no strong electromagnetic interference caused by other electronic or electrical devices around the installation site.</li> <li>Do not refit the inverter unless authorized.</li> <li>All the electrical installation must conform to local and national electrical standards</li> </ul>
	<ul style="list-style-type: none"> <li>Do not touch the housing of the inverter or the radiator to avoid scald as they may become hot during operation.</li> </ul>
	<ul style="list-style-type: none"> <li>Ground with proper technics before operation.</li> </ul>
	<ul style="list-style-type: none"> <li>Do not open the surface cover of the inverter unless authorized. The electronic components inside the inverter are electrostatic sensitive. Do take proper anti-electrostatic measures during authorized operation.</li> </ul>
	<ul style="list-style-type: none"> <li>The inverter needs to be reliably grounded.</li> </ul>
	<ul style="list-style-type: none"> <li>Ensure that DC and AC side circuit breakers have been disconnected and wait at least 5 minutes before wiring and checking.</li> </ul>


## Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- Communication cable x 1

## Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

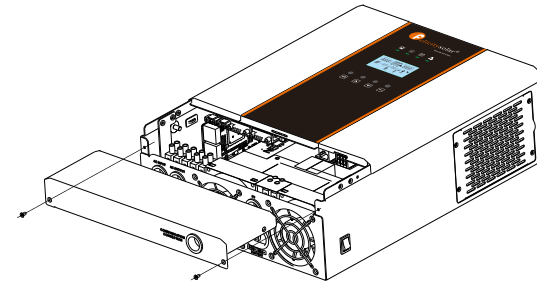

## Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

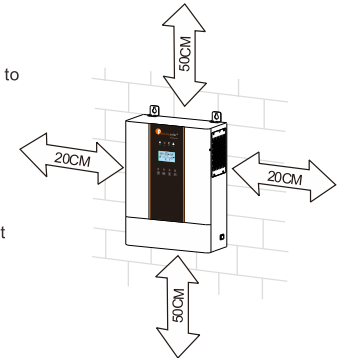

**SUITABLE FOR MOUNTING ON CONCRETE  
OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing three screws. It's recommended to use M4 or M5 screws.

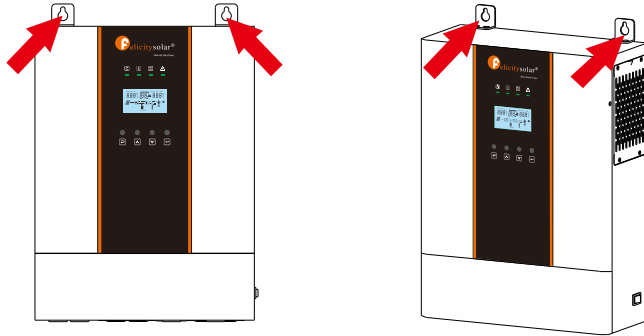

## Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

**WARNING!** All wiring must be performed by a qualified personnel.


**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

**Recommended battery cable and terminal size:**

Model	Wire Size	Cable (mm <sup>2</sup> )	Torque Value(Max)
3KVA/5KVA	1*2AWG	38	2 Nm

**Please follow below steps to implement battery connection:**

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery.
3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

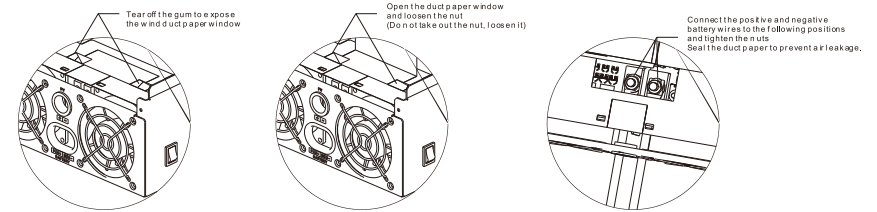

**WARNING: Shock Hazard**  
Installation must be performed with care due to high battery voltage in series.

**CAUTION!!** Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.  
**CAUTION!!** Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.  
**CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

## AC Input/Output Connection

**CAUTION!!** Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 32A for 3KVA and 50A for 5KVA.

**CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

**Suggested cable requirement for AC wires**



Model	Gauge	Torque Value
3KVA	10AWG	1.2Nm
5KVA	8 AWG	1.4~ 1.6Nm

**Please follow below steps to implement AC input/output connection:**

1. Before making AC input/output connection, be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.

3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⊕) first.



⊕ → **Ground (yellow-green)**  
**L** → **LINE (brown or black)**  
**N** → **Neutral (blue)**

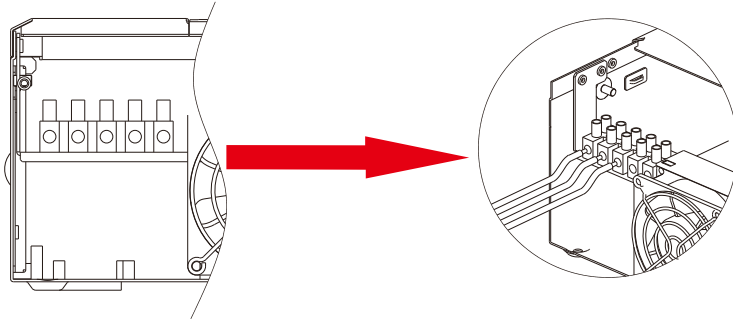

**WARNING:** Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**  
**L** → **LINE (brown or black)**  
**N** → **Neutral (blue)**

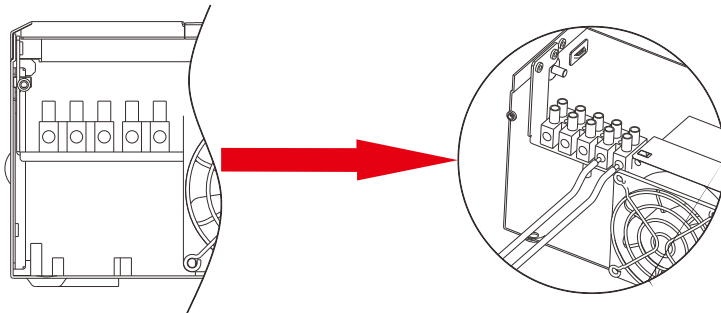

5. Make sure the wires are securely connected.

**CAUTION: Important**

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

## PV Connection



**CAUTION:** Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Cable Size	Torque
3KVA/5KVA	12 AWG	1.4~1.6 Nm

### PV Module Selection:


When selecting proper PV modules, please be sure to consider below parameters:

- Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
- Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

Solar Charging Mode		
INVERTER MODEL	3KVA	5KVA
Max. PV Array Open Circuit Voltage	450 V	
PV Array MPPT Voltage Range	120Vdc~450Vdc	




Please follow below steps to implement PV module connection:

- Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input






connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

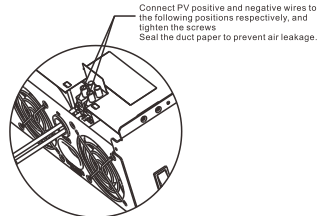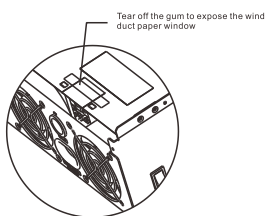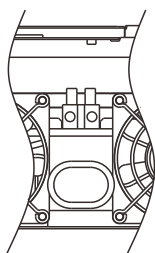

3. Make sure the wires are securely connected.

## Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

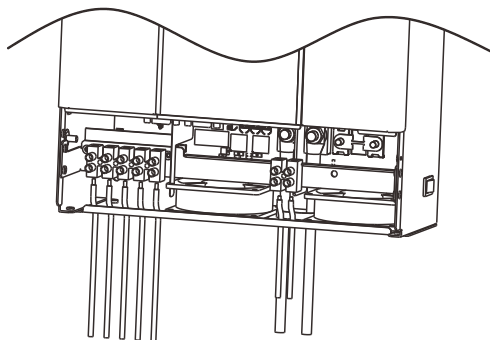


## Dry Contact Signal

There is one dry contact (3A/250VAC) available on the inverter.

Unit Status	Condition	Dry contact port:	
		NC & C	NO & C
Power Off	Unit is off and no output is powered.	Close	Open
Power On	Battery voltage < Setting value in Program 12	Open	Close
	Battery voltage > Setting value in Program 13 or battery charging reaches floating stage	Close	Open

## OPERATION

### Power ON/OFF

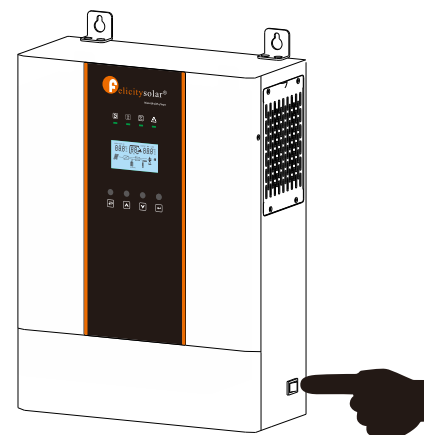

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.


## Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.





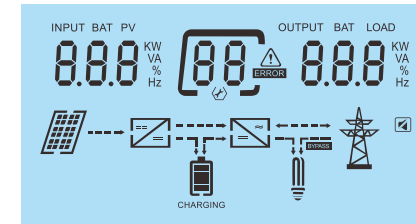

Function Key	Icon	Description
ESC		To exit setting mode
UP		To go to previous selection
DOWN		To go to next selection
ENTER		To confirm the selection in setting mode or enter setting mode
LED Indicator	Icon	Description
Battery		Charging the battery, the LED light flash. If battery is full, the LED light will always-on. The battery is not charged, the LED light will go out.
Utility		Inverter running in utility mode, the LED will always-on. Inverter is not running in utility mode, the LED will go out.
Inverter		Inverter running in off-grid mode, the LED light will always-on. Inverter is not running in off-grid mode, the LED light will go out.
Fault		If inverter in fault event, the LED light will always-on. If inverter in warning event, the LED light will flash. Inverter work normally, the LED light will go out.
Buzzer Information		
Buzzer beep	Turn on/off the inverter, the buzzer will last for 2.5s. Press any button, the buzzer will last for 0.1s. Hold on the "ENTER" button, the buzzer will last for 3s. If in fault event, the buzzer will keep going. If in warning event, the buzzer will beep discontinuous (Check more information on the chapter of "Warning Code Table").	

## LCD Display Icons









Icon	Function description
Input Source Information	
INPUT BAT PV 	Indicate input voltage, input frequency, PV voltage, PV power, battery voltage and charger current.
Configuration Program and Fault Information	
	Indicates the setting programs.
	Indicates the warning and fault codes. Warning:  flashing with warning code. Fault:  lighting with fault code
Output Information	
OUTPUT BAT LOAD 	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.
Battery Information	
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100%.
Mode Operation Information	
	Indicates the utility.
	Indicates load is supplied by utility directly.
	Indicates the utility charger circuit is working.










	Indicates the inverter/charger is working.
	Indicates the PV panels.
	Indicates PV MPPT is working.
<b>Mute Operation</b>	
	Indicates unit alarm is disabled.

## LCD Setting

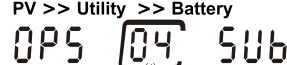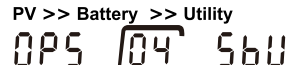After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting items:

Program	Description	Selectable option	
00	Exit setting		
02	Output frequency setting	50Hz 	Output frequency configuration
		60Hz 	
03	Utility input range setting	Appliance mode 	APL should be selected, when the utility is not well.
		UPS mode 	
04	Output source priority	Utility >> PV >> Battery 	Utility provides power to the loads first. PV and battery will provide power to loads only when utility is not available.

		PV >> Utility >> Battery 	PV provides power to the loads first. If PV is not sufficient, utility will supply power the loads at the same time. Battery will provide power to loads only when utility is not available.
		PV >> Battery >> Utility 	PV provides power to the loads first. If PV is not sufficient, battery will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to the setting point in program 12.
05	Charger priority	<b>If inverter is working in utility mode, charger priority can be set as below. However, when inverter is working in Battery mode, only PV can charge battery.</b>	
		PV first 	PV will charge battery first. Utility will charge battery only when PV is unavailable.
		PV and Utility 	PV and utility will charge battery together.
		PV Only 	Only PV can charge the battery.
06	Max charging current (Utility charge current + PV charging current)	60A 	Setting range is from 10A to 100A. Increment of each click is 1A.
07	Max utility charging current setting	30A 	Setting range is from 10A to 100A. Increment of each click is 1A.
08	Battery type setting	The battery type is AGM 	If "Self-defined" or "Lib" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 9, 10 and 11.
		The battery type is Flooded 	If "Lib" is selected, inverter can charge Lithium battery when the Lithium battery need to be activated. Please make sure Lithium battery is connected before you start up inverter. If inverter doesn't connect battery or





		<p>The battery type is self-defined bAt [08] USE</p> <p>The battery type is Lib bAt [08] LIb</p>	Lithium battery, do not select "Lib" battery type.
09	Bulk charging voltage setting (C.V voltage)	<p>24 model [4] [09] 28.2<sup>v</sup></p> <p>48V model [4] [09] 56.4<sup>v</sup></p>	<p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 24.0V to 30.0V. Increment of each click is 0.1V</p> <p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 48.0V to 60.0V. Increment of each click is 0.1V</p>
10	Floating charging voltage	<p>24V model FL4 [10] 27.0<sup>v</sup></p> <p>48V model FL4 [10] 54.0<sup>v</sup></p>	<p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 24.0V to 30.0V. Increment of each click is 0.1V</p> <p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 48.0V to 60.0V. Increment of each click is 0.1V</p>
11	Low DC cut-off voltage	<p>24V model bC4 [11] 21.0<sup>v</sup></p> <p>48V model bC4 [11] 42.0<sup>v</sup></p>	<p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 21.0V to 27.0V. Increment of each click is 0.1V</p> <p>If "self-defined" or "Lib" is selected in program 8, this program is enabled. Setting range is from 42.0V to 54.0V. Increment of each click is 0.1V</p>
12	Setting battery voltage point back to utility when selecting "SBU priority" in program 4	<p>24V model bU4 [12] 23.0<sup>v</sup></p> <p>48V model bU4 [12] 46.0<sup>v</sup></p>	<p>Setting range is from 22.0V to 27.0V. Increment of each click is 0.1V</p> <p>Setting range is from 44.0V to 54.0V. Increment of each click is 0.1V</p>









13	Setting battery voltage point back to battery mode when selecting "SBU priority" in program 4	<p>24V model bb4 [13] 27.0<sup>v</sup></p> <p>48V model bb4 [13] 54.0<sup>v</sup></p> <p>Fully charged bb4 [13] FUL</p>	<p>Setting range is from 24.0V to 30.0V. Increment of each click is 0.1V</p> <p>Setting range is from 48.0V to 60.0V. Increment of each click is 0.1V</p> <p>Battery should be charged to float charging stage.</p>
14	Overload bypass function	<p>Disable LbP [14] d15</p> <p>Enable LbP [14] ENA</p>	If it is enabled, the inverter will switch to utility mode if overload happens in battery mode.
15	Overload restart function	<p>Disable OLT [15] d15</p> <p>Enable OLT [15] ENA</p>	If it is enabled, the inverter will auto restart when overload occurs.
16	Over temperature restart function	<p>Disable OEt [16] d15</p> <p>Enable OEt [16] ENA</p>	If it is enabled, the inverter will auto restart when over temperature occurs.
17	Backlight of LCD	<p>Disable bL [17] d15</p> <p>Enable bL [17] ENA</p>	<p>If selected, LCD backlight will be off after no button is pressed for 60s.</p> <p>If selected, LCD backlight will be always-on.</p>

18	Auto return to the first page of display screen	<b>Disable</b> bFP [18] d15	If selected, the display screen will stay at latest screen user finally switches.
		<b>Enable</b> bFP [18] eNA	If selected, it will automatically return to the first page of display screen (Input voltage/ output voltage) after no button is pressed for 60s.
19	Buzzer Alarm	<b>Disable</b> bEP [19] d15	If selected, buzzer is not allowed to beep.
		<b>Enable</b> bEP [19] eNA	If selected, buzzer is allowed to beep.


## Display Information

The LCD display information will be switched by pressing "UP" or "DOWN" key. The selectable information is switched as below order:
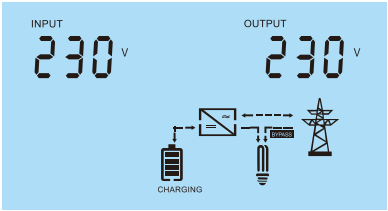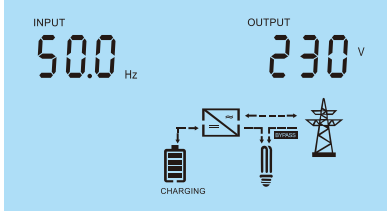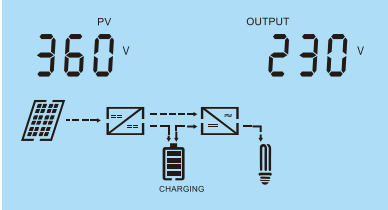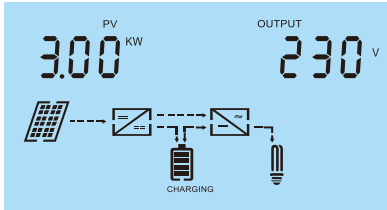
<b>Input voltage / Output voltage</b> Utility voltage is 230V, output voltage is 230V 	<b>Input frequency / Output voltage</b> Utility frequency is 50.0Hz, output voltage is 230V 
<b>PV voltage / Output voltage</b> PV voltage is 360V, output voltage is 230V 	<b>PV power / Output voltage</b> PV power is 3.00kW, output voltage is 230V 
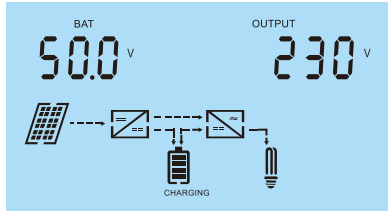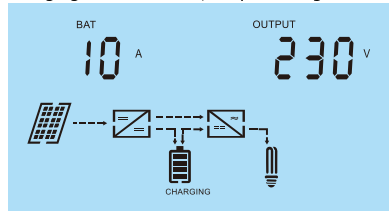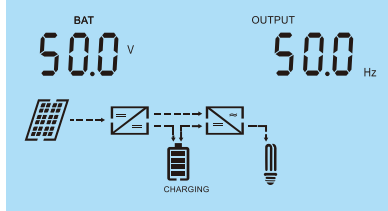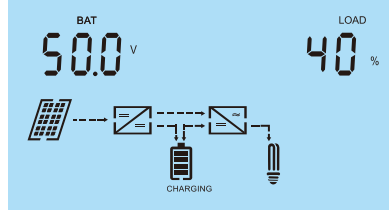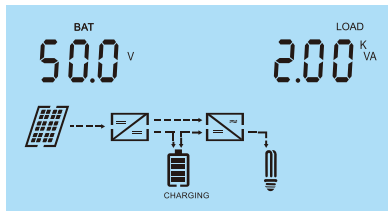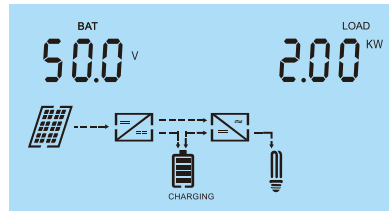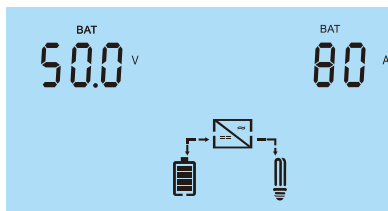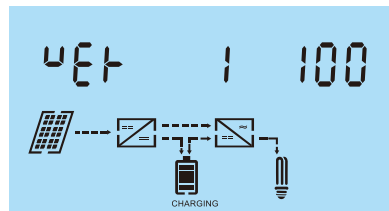
<b>Battery voltage / Output voltage</b> Battery voltage is 50.0V, output voltage is 230V 	<b>Charging current / Output voltage</b> Charging current is 10A, output voltage is 230V 
<b>Battery voltage / Output frequency</b> Battery voltage is 50.0V, output frequency is 50.0Hz 	<b>Battery voltage / Load percentage</b> Battery voltage is 50.0V, load percentage is 40% 
<b>Battery voltage / Load VA</b> Battery voltage is 50.0V, output wattage is 2.00kVA 	<b>Battery voltage / Load wattage</b> Battery voltage is 50.0V, output wattage is 2.00kW 
<b>Battery voltage / Discharging current</b> Battery voltage is 50.0V, discharging current is 80A 	<b>CPU software version</b> CPU software version 1100 

## Warning Code Table

When fault event happens, the fault LED is flashing. At the same time, warning code, icon  is shown on the LCD screen.

Warning Code	Warning Information	Audible Alarm	Trouble Shooting
01	Fan is locked.	Beep three times every second	Check if the Fans wiring connected well. Replace the fan.
02	Overload	Beep twice every second	Reduce the loads.
03	Low battery	Beep once every second	The battery voltage is too low, it should be charging.

## Fault Code Table

When fault event happens, inverter will cut off output, and the fault LED is solid on. At the same time, fault code, icon



and **ERROR** are shown on the LCD screen.

Fault Code	Fault information	Trouble Shooting
01	Bus voltage is too high	AC Surge or internal components failed. Restart the unit, if the error happens again, please return to repair center.
02	Bus voltage is too low	Restart the unit, if the error happens again, please return to repair center.
03	Bus soft start fail	Internal components failed. Restart the unit, if the error happens again, please return to repair center.
04	Inverter soft start fail	Internal components failed. Restart the unit, if the error happens again, please return to repair center.
05	Over current or surge detected by Software	Restart the unit, if the error happens again, please return to repair center.
06	Over current or surge detected by hardware	Restart the unit, if the error happens again, please return to repair center.
07	Output voltage is too low	Reduce the connected load. Restart the unit, if the error happens again, please return to repair center.

08	Output voltage is too high	Restart the unit, if the error happens again, please return to repair center.
09	Output short circuited	Check if wiring is connected well and remove abnormal load.
10	Overload time out	Reduce the connected load by switching off some equipment.
11	Battery voltage is too high	Check if spec and quantity of batteries are meet requirements.
12	Over current happen at DCDC circuit	Restart the unit, if the error happens again, please return to repair center.
13	PV voltage is too high	Reduce the number of PV modules in series.
14	Short circuited happen at PV port	Check if wiring is connected well.
15	PV power is abnormal	Reduce the number of PV modules.
16	Over current happen at PV port	Restart the unit, if the error happens again, please return to repair center.
17	Fan is locked	Check if wiring is connected well. Replace the fan.
18	Over temperature happen at PV circuit	The temperature of internal PV converter component is over the limitation. Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
19	Over temperature happen at battery circuit	The temperature of internal battery converter component is over the limitation. Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
20	Over temperature happen at inverter circuit	The temperature of internal inverter component is over the limitation. Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
21	The inner temperature over	The inner temperature is over the limitation. Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
22	DCDC current sensor failed	Restart the unit, if the error happens again, please return to repair center.
23	No.2 DCDC current sensor failed	Restart the unit, if the error happens again, please return to repair center.
24	Inverter current sensor failed	Restart the unit, if the error happens again, please return to repair center.
25	OP current sensor failed	Restart the unit, if the error happens again, please return to repair center.
26	Sharing current sensor failed	Restart the unit, if the error happens again, please return to repair center.