


51.2V Power Wall Battery Pack Storage Battery

USER INSTRUCTION

1. Product Description

This power wall mode lifepo4 lithium battery belongs to one of the series of household energy storage products that are independently designed and developed. It has long cycle life, high safety standard BMS software protection and strong housing, exquisite looks, and easy installation, etc. It is widely used in energy storage system with off-grid inverters, on-off grid inverters and hybrid inverters.

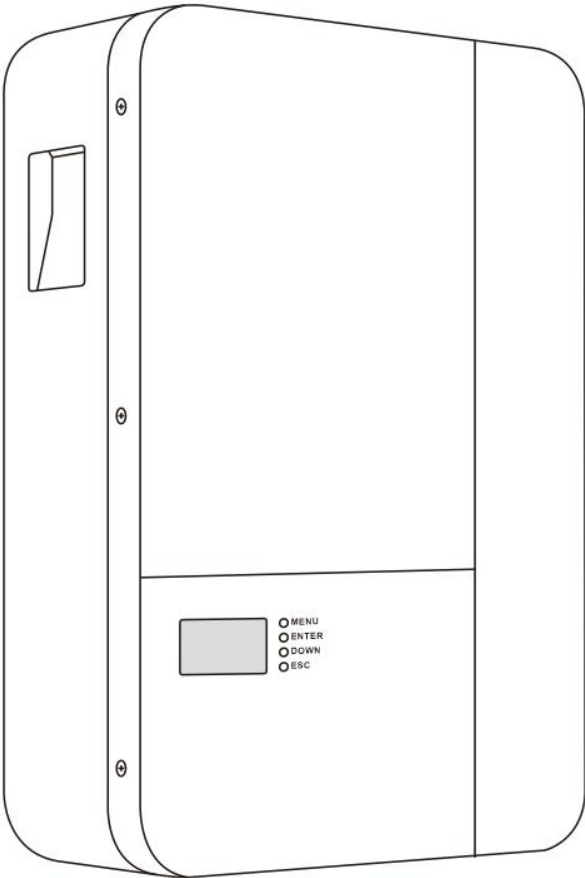

*This interface design is only for reference, it may change according to different demands


2. Product Function Description

2.1 Product Specifications


| Items | | Condition | Specification | | | |
|--------------------------------------|-----------|--|-------------------------------------|----------------------|----------------------|--------------------|
| Nominal Capacity | | Standard charge/discharge | 50.0Ah | 100.0Ah | 150.0Ah | 200.0Ah |
| Nominal Voltage | | Average | 51.2V | 51.2V | 51.2V | 51.2V |
| Standard Charging Refer to 3.1 | | Constant current Constant voltage End current(Cut off) | 10A 56.8V 0.2A | 20A 56.8V 0.5A | 30A 56.8V 0.7A | 40A 56.8V 1A |
| Charging Voltage | | / | 56.8V | 56.8V | 56.8V | 56.8V |
| Max. Continuous Charge Current | | 25±3℃ | 25.0A | 50.0A | 75.0A | 100.0A |
| Standard Discharging Refer to 3.2 | | Constant current End voltage(Cut off) | 25.0A 43.2V | 50.0A 43.2V | 75.0A 43.2V | 100.0A 43.2V |
| Max Continuous Discharge Current | | 25±3℃ | 50.0A | 100.0A | 100.0A | 100.0A |
| Max Output Power | | 25±3℃ | 2.56KW | 5.12KW | 5.12KW | 5.12KW |
| Operating Temperature | Charge | / | 0℃~ 60℃ | | | |
| | Discharge | / | -20℃~ 60℃ | | | |
| Storage Temperature | | 1 month 3 month 6 month | -20℃~ 45℃ -20℃~ 35℃ -20℃~ 25℃ | | | |
| Power Cable Terminal | | / | Ring Terminal | | | |

2.2 Parallel Connection


When Connect the batteries in parallel, connect the positive terminal and positive terminal (red colour) in parallel, and the negative terminal and negative terminal (black colour) in parallel, the max parallel quantity is 15pcs, as shown in the figure below:

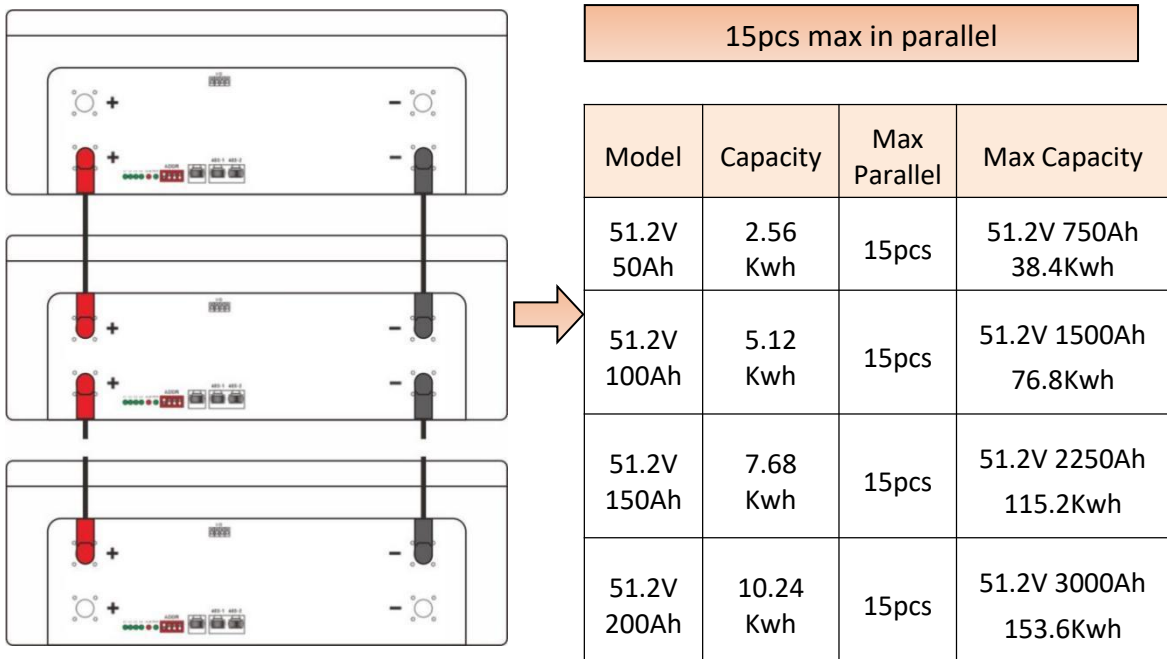

Solar System Structure

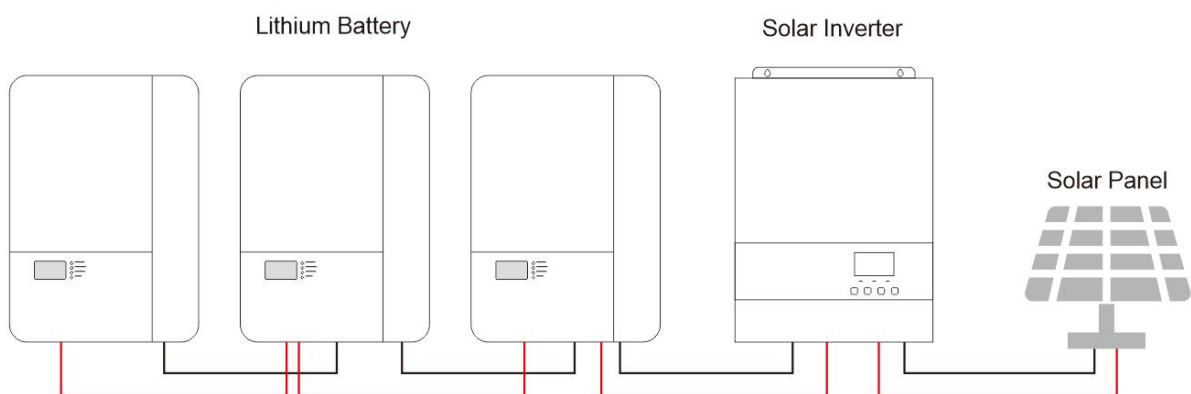

2.3 Dial Code Switch Settings (parallel connection needed)

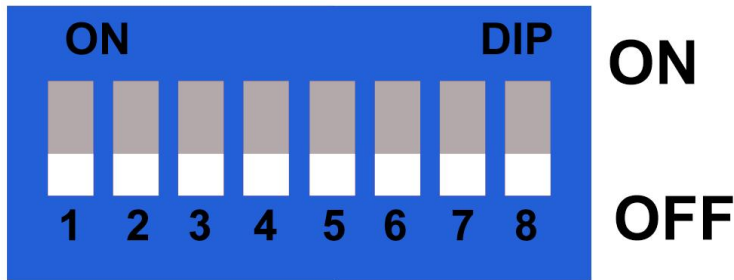

When the battery packs are connected in parallel, the dial code switch of each battery can be used to distinguish different Pack addresses. The hardware address can be set through the dial code switch on the board.

*Bit1 to bit4 are used to set the slave address, while the host address is fixed to 0;

*Bit5 to bit8 are set according to the number of slaves in parallel, only the host battery needs to be set, the slave batteries are fixed in 0.

*The definition of the dial code switch refer to the following table.


| ADD | Dial switch position | | | | Explain |
|-----|----------------------|-----|-----|-----|------------------------------------|
| | #1 | #2 | #3 | #4 | |
| 0 | OFF | OFF | OFF | OFF | No parallel connection, only 1 pcs |
| 1 | ON | OFF | OFF | OFF | Pack1 |
| 2 | OFF | ON | OFF | OFF | Pack2 |
| 3 | ON | ON | OFF | OFF | Pack3 |
| 4 | OFF | OFF | ON | OFF | Pack4 |
| 5 | ON | OFF | ON | OFF | Pack5 |
| 6 | OFF | ON | ON | OFF | Pack6 |
| 7 | ON | ON | ON | OFF | Pack7 |
| 8 | OFF | OFF | OFF | ON | Pack8 |
| 9 | ON | OFF | OFF | ON | Pack9 |
| 10 | OFF | ON | OFF | ON | Pack10 |
| 11 | ON | ON | OFF | ON | Pack11 |
| 12 | OFF | OFF | ON | ON | Pack12 |
| 13 | ON | OFF | ON | ON | Pack13 |
| 14 | OFF | ON | ON | ON | Pack14 |
| 15 | ON | ON | ON | ON | Pack15 |

| NO. Of Parallel | Dial switch position | | | | Explain |
|-----------------|----------------------|-----|-----|-----|------------|
| | #5 | #6 | #7 | #8 | |
| 2 | ON | OFF | OFF | OFF | 2 parallel |
| 3 | OFF | ON | OFF | OFF | 3 parallel |
| 4 | ON | ON | OFF | OFF | 4 parallel |

| | | | | | |
|----|-----|-----|-----|-----|-------------|
| 5 | OFF | OFF | ON | OFF | 5 parallel |
| 6 | ON | OFF | ON | OFF | 6 parallel |
| 7 | OFF | ON | ON | OFF | 7 parallel |
| 8 | ON | ON | ON | OFF | 8 parallel |
| 9 | OFF | OFF | OFF | ON | 9 parallel |
| 10 | ON | OFF | OFF | ON | 10 parallel |
| 11 | OFF | ON | OFF | ON | 11 parallel |
| 12 | ON | ON | OFF | ON | 12 parallel |
| 13 | OFF | OFF | ON | ON | 13 parallel |
| 14 | ON | OFF | ON | ON | 14 parallel |
| 15 | OFF | ON | ON | ON | 15 parallel |

2.4 Communication port

a)RS485/CAN main communication

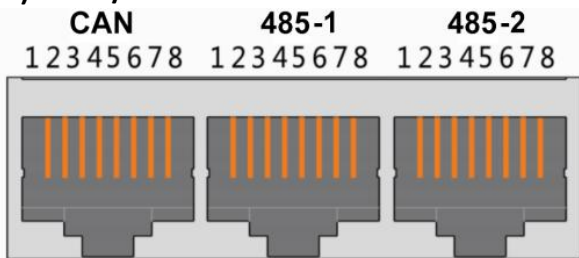


If you need to communicate with the monitoring device through RS485 or Can, the monitoring device will be used as the host, and the address setting range of other batteries will be 2~15 according to the polling data of the address.

The product adopts isolated communication design, supports RS485/CAN communication mode, RS485 communication default baud rate is 19200bps, the default baud rate of CAN communication is 500Kbps;

All pins of 485-1 and 485-2 connectors are parallel, so the interface definition is identical.

| RS485 & CAN use 8P8C vertical RJ45 socket | | | |
|---|----------|---------|--------|
| RS485 PIN | Define | CAN PIN | Define |
| 1、3、8 | RS485-B1 | 1、3、8 | NC |
| 2、7 | RS485-A1 | 4 | CANL |
| 6 | RS485-A2 | 5 | CANH |
| 5 | RS485-B2 | 2、6、7 | NC |

b)RS485-1 and RS485-2 communication for parallel connection

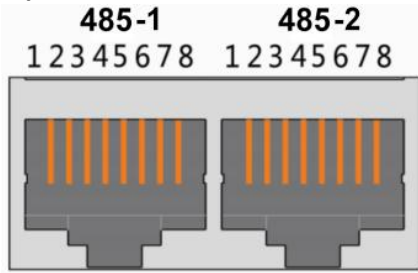

With dual RS485 interfaces, the default baud rate is 19200bps. If you need to communicate the batteries in parallel with the monitoring device or inverter, you need to connect each battery with RS485-1 and RS485-2 ports, so the host battery can read the information of each battery.

2.5 LED Indication Function

The current power consumption and operation status of the product are shown through LED indicator Light Working status indication

| system state | Protection / alarm / normal | RUN | ALM | Electric LED | | | | explain |
|--------------|--|------------|------------|---|---|---|---|--|
| | | ● | ● | ● | ● | ● | ● | |
| Shut down | dormancy | Extinguish | Extinguish | Total extinction | | | | Total extinction |
| Standby | normal | Flash 1 | Extinguish | Total extinction | | | | position in readiness |
| | give an alarm | Flash 3 | Flash 3 | | | | | ALM and run lights flash simultaneously 3 |
| charge | normal | Stay on | Extinguish | According to the power indication Maximum LED flash 2) | | | | Maximum LED flash 2 |
| | Over voltage alarm | Stay on | Extinguish | | | | | Maximum LED flash 2 |
| | Over current alarm | Stay on | Flash 3 | According to the electricity quantity indication | | | | Maximum LED flash 2 |
| | Over voltage protection | Stay on | Extinguish | Stay on | | | | Run lamp: often on the city wire On, the power supply is in normal standby when offline state |
| | Over current protection (when the function of infinite current) | Extinguish | Stay on | Extinguish | | | | |
| | Current limiting charging | Stay on | Extinguish | According to the electricity quantity indication | | | | Maximum LED flash 2 |
| discharge | normal | Flash 3 | Extinguish | According to the electricity quantity indication | | | | According to the indicator of the power normally on |
| | give an alarm | Flash 3 | Flash 3 | | | | | ALM and run lights flash simultaneously 3 |
| | Protection of over current, short circuit, reverse connection, etc | Extinguish | Stay on | Extinguish | | | | |
| temperature | Charging alarm | Stay on | Flash 3 | According to the electricity quantity indication | | | | Maximum LED flash 2 |
| | Discharge alarm | Flash 3 | Flash 3 | According to the electricity quantity indication | | | | According to the indicator of constant power on, ALM and run lights flash synchronously 3 |
| | protect | Extinguish | Stay on | Extinguish | | | | |

Capacity Indicator

| state | charge | | | | discharge | | | |
|----------------------|---------|------------|------------|------------|-----------|------------|------------|------------|
| Capacity indicator | L1● | L2● | L3● | L4● | L1● | L2● | L3● | L4● |
| 0~25% | twinkle | Extinguish | Extinguish | Extinguish | bright | Extinguish | Extinguish | Extinguish |
| 25~50% | bright | twinkle | Extinguish | Extinguish | bright | bright | Extinguish | Extinguish |
| 50~75% | bright | bright | twinkle | Extinguish | bright | bright | bright | Extinguish |
| 75~100% | bright | bright | bright | twinkle | bright | bright | bright | bright |
| Operation indicator● | YES | | | | Flash 3 | | | |

LED Flashing Instructions

| Flash way | Bright | NO |
|-----------|--------|-------|
| Flash 1 | 0.25S | 3.75S |
| Flash 2 | 0.5S | 0.5S |
| Flash 3 | 0.5S | 1.5S |

Note:

The LED indicator alarm can be enabled or disabled through the host computer.
The factory default is enabled.

2.6 Sleep and wake-up mode

| NO. | Dormancy condition | Wakeup condition | remarks |
|-----|--|---|--------------------|
| 1 | Normal standby for 48 hours | External power on voltage (43.2V ~ 56.4v), charging, reset button, soft switch. | Soft switch option |
| 2 | The lowest monomer voltage is lower than the monomer over discharge protection value (can be set) or the total voltage is lower than the overall over discharge protection value (can be set). After 10 minutes, it enters under voltage sleep | External power on voltage (43.2V ~ 60v), charging, reset button, soft switch. | Soft switch option |
| 3 | Forced sleep is controlled by the upper computer | External power on voltage (43.2V ~ 60v), charging, reset button, soft switch. | Soft switch option |

2.7 Reset key control function

It has activation / sleep / reset key, which can integrate activation and sleep functions. BMS has screening function and automatically enters sleep according to power, load and battery pack status.

| NO. | Function | Definition |
|-----|------------------------|---|
| 1 | Power on / start | The BMS is in the sleep state. After pressing this key, the BMS will be started, and the LED indicator will flash in turn to turn into the normal working state. |
| 2 | Shutdown / hibernation | When the BMS is in the standby or discharge state, press this key for 3S, the BMS will be dormant, and the LED indicator will flash in turn to the dormant state. |


3. Electrical Specification

(Unless there is special requirement, the test shall be done under temperature of $25\pm 2^{\circ}\text{C}$ and with relative humidity of 45~85%.)

| Items | Test Condition | | | | | Standard |
|----------------------------|--|-----------------------|---------------------|----------------------|----------------------|---|
| 3.1 Standard Charge | The standard charge means charge the battery in temperature below $25\pm 3^{\circ}\text{C}$ with initial charge current of 10A(50Ah)/ 20A(100Ah)/ 30A(150Ah)/ 40A(200Ah) and with constant voltage of 56.8V, then charge with constant voltage of 56.8V and with floating current taper to 0.2A(50Ah)/ 0.5A(100Ah)/ 0.7A(150Ah)/ 1A(200Ah) cut-off (Charger should be exclusively designed for lithium battery, with an accuracy of $\pm 0.05\text{V}$) within 6 hours. | | | | | / |
| 3.2 Standard Discharge | After battery is charged fully in accordance with the standard and then discharge to voltage 43.2V with discharge current of 10A(50Ah)/ 20A(100Ah)/ 30A(150Ah)/ 40A(200Ah).The minimum gap time between charge and discharge period is 30 minutes. | | | | | Minimum Capacity $\geq 50/100/150/200\text{Ah}$ |
| 3.3 Cycle Life | After the completion of standard charge and 30 minutes' rest, discharge with 80% DOD with constant current of 0.2C in the ($25\pm 3^{\circ}\text{C}$) environment, after 6000 cycles, rest it for 1 day and test the capacity in accordance with the above 3.2 | | | | | Capacity $\geq 80\%$ Minimum Capacity |
| 3.4 Discharge Character | Discharge current | Discharge Temperature | | | | At -10°C : Discharge Capacity $\geq 50\%$ At 0°C : Discharge capacity $\geq 80\%$ At 25°C Discharge capacity $\geq 100\%$ At 40°C Discharge capacity $\geq 100\%$ |
| | 0.2C | -10°C | 0°C | 25°C | 40°C | |
| | Batteries shall be charged according to 3.1 and discharged in accordance with the above mentioned temperature. The discharge capacity shall meet the standard. Batteries shall be stored for 6~8 hours at the test temperature | | | | | |

4. BMS

4.1 BMS System Schematic Diagram

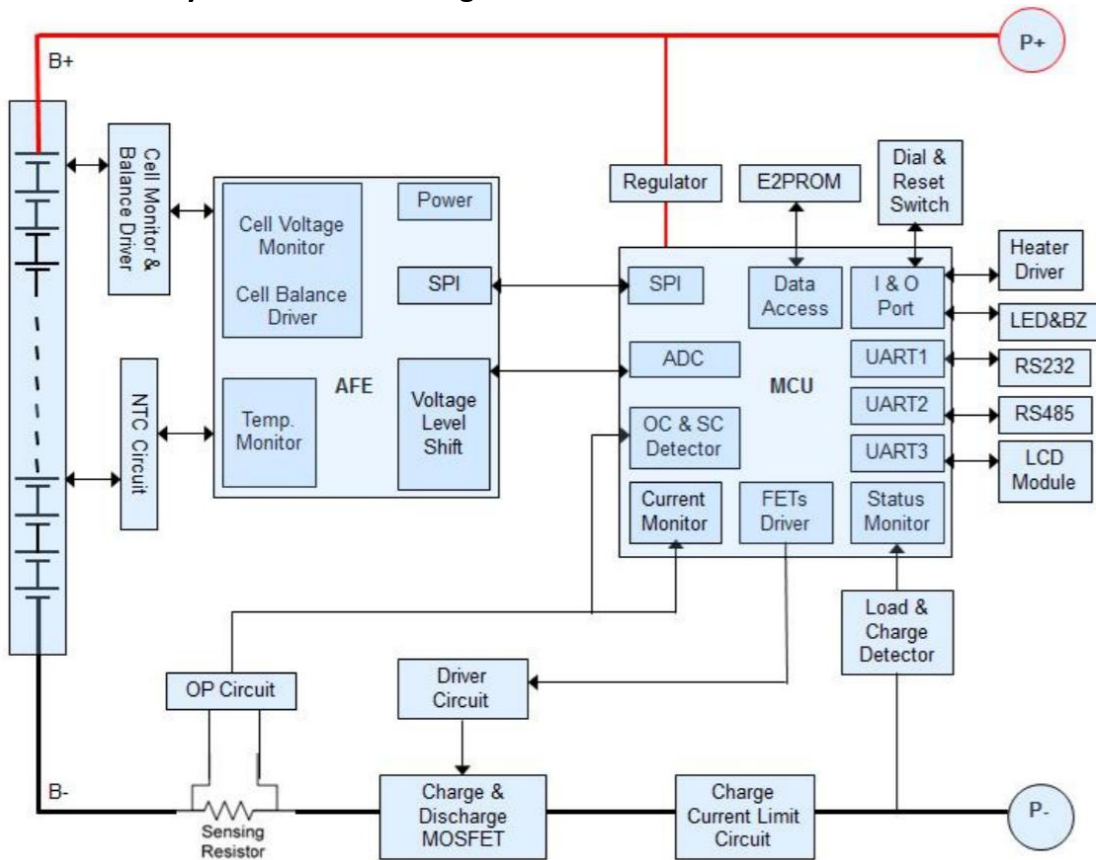

4.2 BMS Parameter

| No. | Item | 51.2V 50Ah | 51.2V 100Ah | 51.2V 150Ah | 51.2V 200Ah | |
|-----|---------------------------|---|----------------|----------------|----------------|----------------|
| 1 | Power Consumption | Low power consumption mode | ≤100μA | ≤100μA | ≤100μA | |
| 2 | Over charge Protection | Over charge detection voltage | 3.7V | 3.7V | 3.7V | |
| | | Over charge release voltage | 3.38V | 3.38V | 3.38V | |
| 3 | Over discharge protection | Over discharge detection voltage | 2.5V | 2.5V | 2.5V | |
| | | Over discharge release voltage | 2.95V | 2.95V | 2.95V | |
| 4 | Over current protection | Charging over current detection current (detection time) | 27.5A (1S) | 55A (1S) | 82.5A (1S) | 110A (1S) |
| | | Discharging over current detection current 1 (detection time) | 27.5A 1S | 55A 1S | 82.5A 1S | 110A 1S |
| | | Discharging over current detection current 2(detection time) | ≥75A 100ms | ≥150A 100ms | ≥150A 100ms | ≥150A 100ms |
| 5 | Temp. Protection | Detection temperature | 65±2℃ | 65±2℃ | 65±2℃ | 65±2℃ |
| 6 | Balance | Balance voltage | 3.5V | 3.5V | 3.5V | 3.5V |

5. Product Life

The design life of this product is 10 years.

6. Transportation

During transportation, please keep the battery from acutely vibration, impacting, over-exposure to the sun and drenching.

7. Storage

7.1 Storage environment requirement

Under temperature of $25\pm 2^{\circ}\text{C}$ and relative humidity of 45~85%.

7.2 Storage term

The lithium battery must be charged every six months, and a complete charging and discharging period is required in every nine months.

8. Cautions

- ※The installation and debugging should be operated by professional electric personnel.
- ※Please do not stick your hands or other objects deep into the interior of the product.
- ※Please do not open the product without a professional around.
- ※Please do not mechanically damage the battery module of the energy storage cabinet (perforation, deformation, peeling, etc.).
- ※Please use dry powder extinguisher as extinguishing agent.
- ※Please do not let the storage cabinet battery module contact abnormal metals or conductors.
- ※Please do not use the product after short circuit occurs.
- ※Please do not expose the energy storage cabinet to flammable or hazardous chemicals or vapors.

